

PICTURE PERFECT SOUND®




INSTALLATION GUIDE


HzUMB-OS

for Hz44, Hz44LX, Hz55LX, ULTIMA over 76 "


Completed Assembly

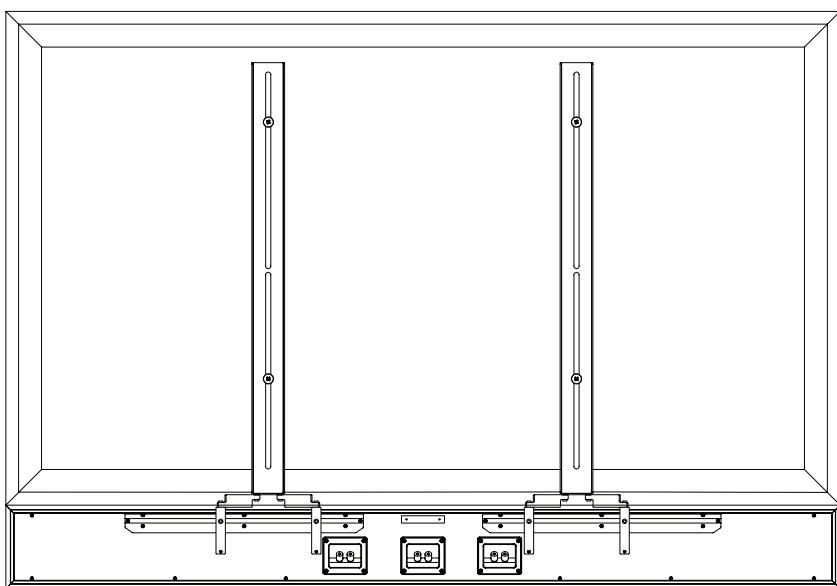


Universal TV Mount Hardware

 

8 x
M6 Screw

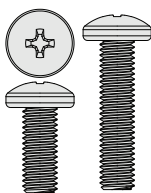

8 x
M8 Screw

 

12 x
Spacers



4 x
M6 Lock
Washer



4 x
M8 Lock
Washer



4 x
Flat Washer

 
HzUMB Parts



1 x
Foam Tape




4 x
Short Button
Head Screw



8 x
Long Button
Head Screw



 2 x
Hex Key



4 x
Paddle w/
Set Screw




4 x
Swing Arm



2 x
Steel
Upright


*Drawings not to scale

Fig. 1

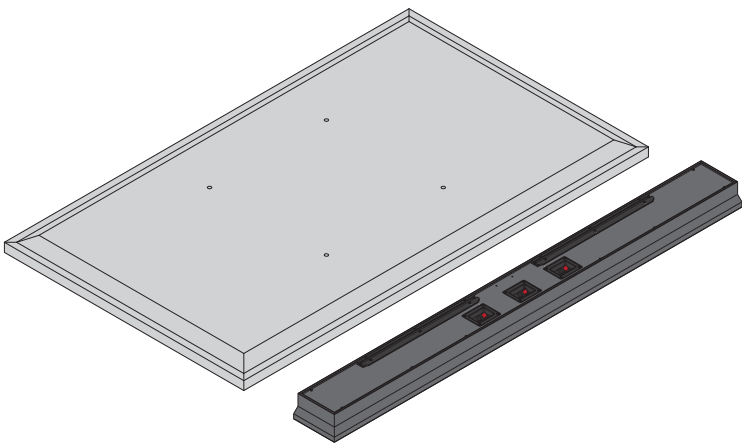


Place **TV** and **Speaker** facedown on a clean, padded surface.

Fig. 2

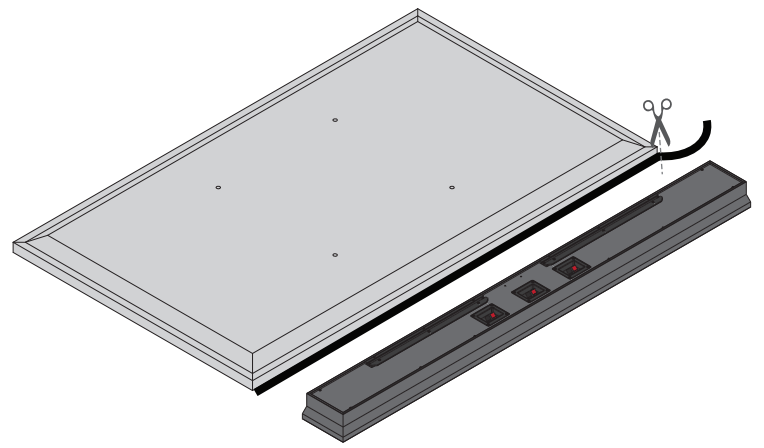


{Optional} For TVs with clear bezels or gaps between speaker and TV, apply **Foam Tape** to TV's edge and cut to size.

Fig. 3

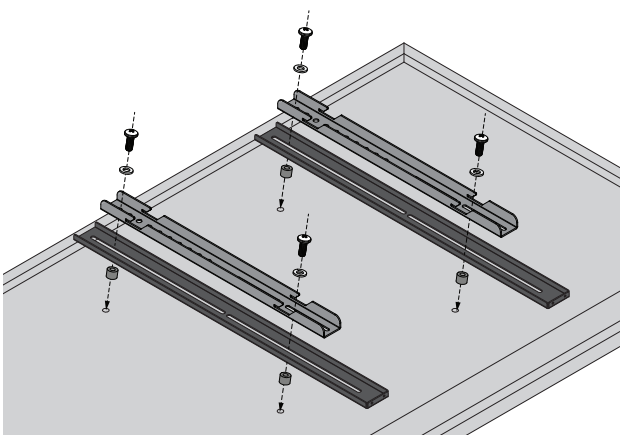


Affix **Steel Uprights** and **TV Mount Rails** with **M6 or M8 Screws** and **Washers**. Use **Spacers** as needed to ensure the **Steel Uprights** and **TV Mount Rails** are level.

Fig. 4

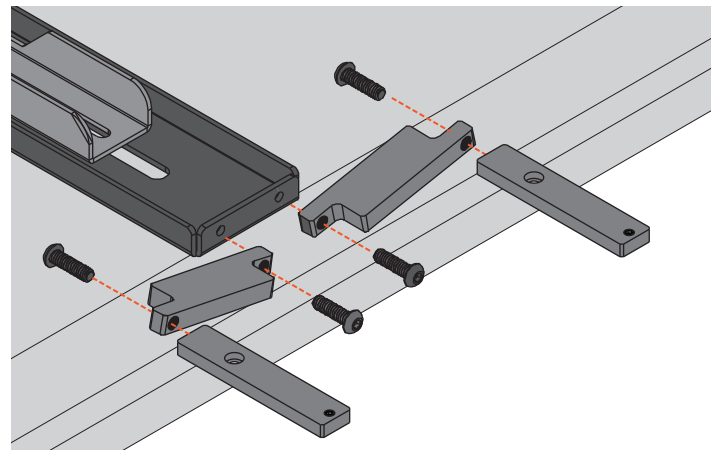


Loosely attach **Swing Arms** to **Paddles** and **Steel Uprights** using **Long Button Head Screws**.

Fig. 5

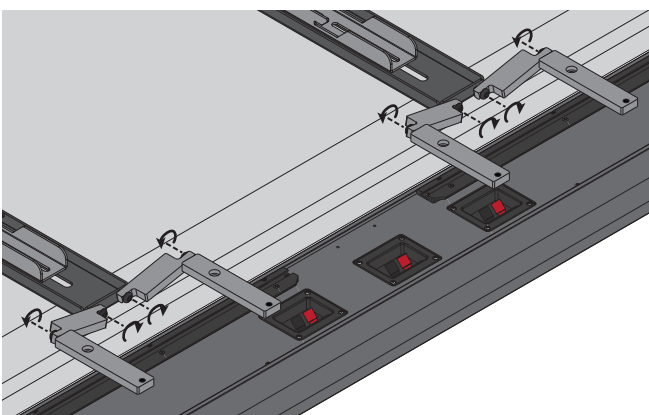


Position speaker so **Paddles** rest on speaker mount rails. Align T-nuts in mount rails with holes on **Paddles**. Tighten **Long Button Head Screws** with extra torque. (Mount rails and T-nuts come attached to speaker.)

Fig. 6

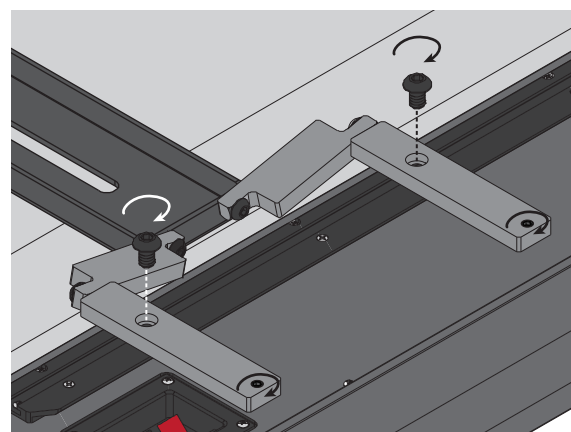

Slide speaker flush and centered with TV. Screw **Paddles** to T-nut in speaker's mount rails using **Short Button Head Screws**. Adjust speaker tilt using set screws in **Paddles**.

Fig. 7

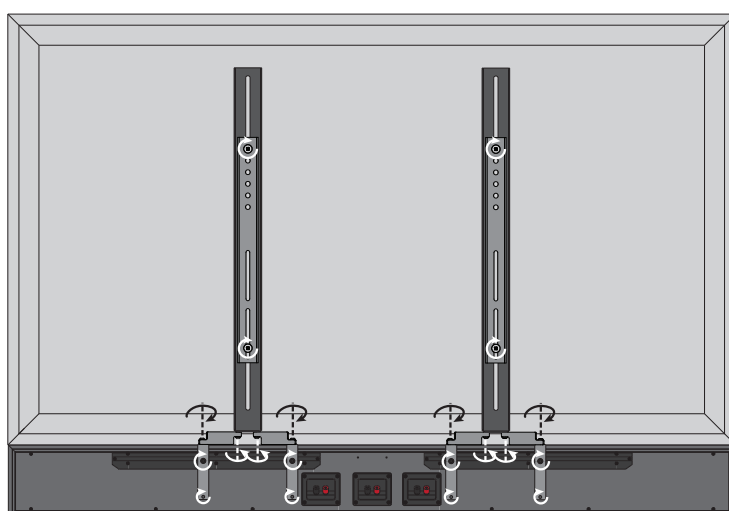

Tighten all screws and set screws down before mounting and wiring the TV and speaker. 2 people are needed for this task.

QUESTIONS?

Call Customer Service
1.888.213.5015
Mon–Fri 8AM–6PM EST

CALL 1.888.213.5015 OR VISIT WWW.LEONSPEAKERS.COM FOR MORE INFORMATION

ALL INFORMATION COPYRIGHT ©2016, LEON SPEAKERS, INC.