



Horizon OTO Powered Soundbar


HzOTO-44UX / HzOTO-400UX / Framebar44UX-PWR
Installation Instructions

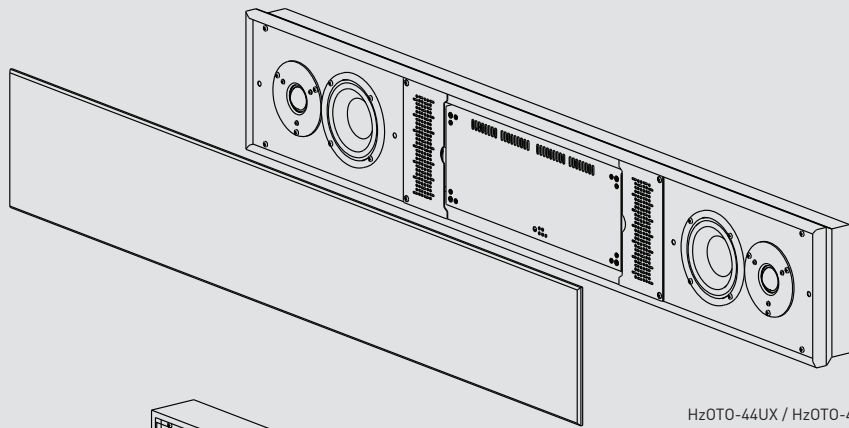


HzOTO-44UX / HzOTO-400UX

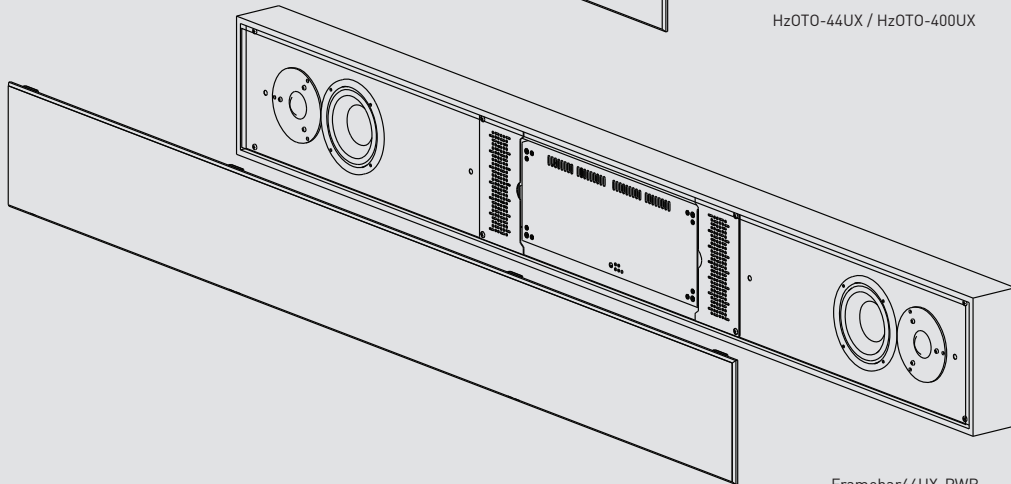

Framebar44UX-PWR

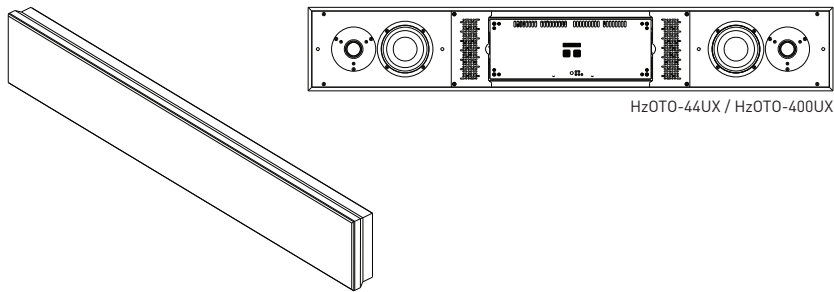


HzOTO-44UX / HzOTO-400UX

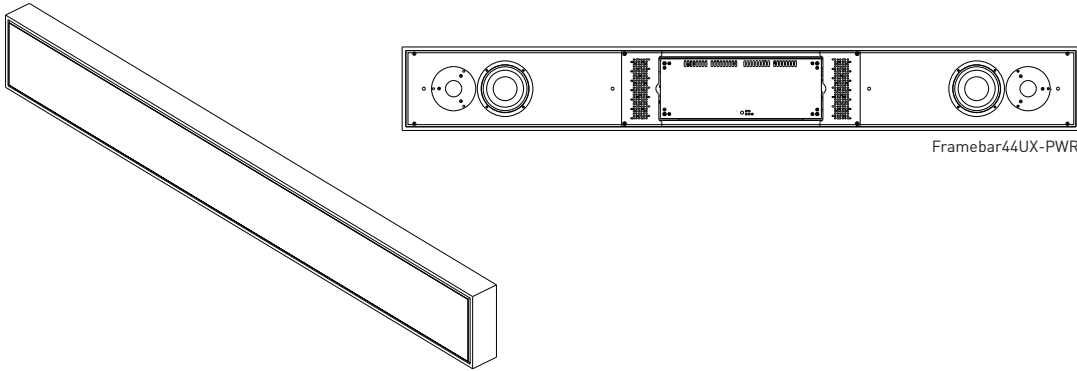


Framebar44UX-PWR

WHAT'S INCLUDED

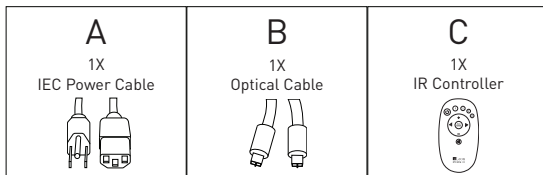

Drawings not to scale

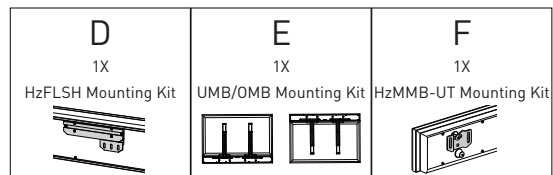

Your order may contain one of the above listed mounting kits and its corresponding instruction manual.
Drawings not to scale


BEFORE INSTALLATION

Choose an installation location free of physical obstructions behind or within the wall.

Working near electrical equipment and wires poses an electrocution hazard. Turn off nearby electrical circuits from the breaker. Use a non-contact voltage tester to confirm that the installation location is free of live electrical wires and equipment prior to cutting or drilling into the wall. Contact a qualified electrician before making any modifications to electrical wiring.


Determine the potential hazards of working with hand or power tools and take the appropriate safety precautions. Use personal protective equipment (PPE) as appropriate, including, but not limited to: vision, hearing, and respiratory protection.

Consult local building and/or electrical codes prior to installation of speakers, cabling, or electrical equipment.

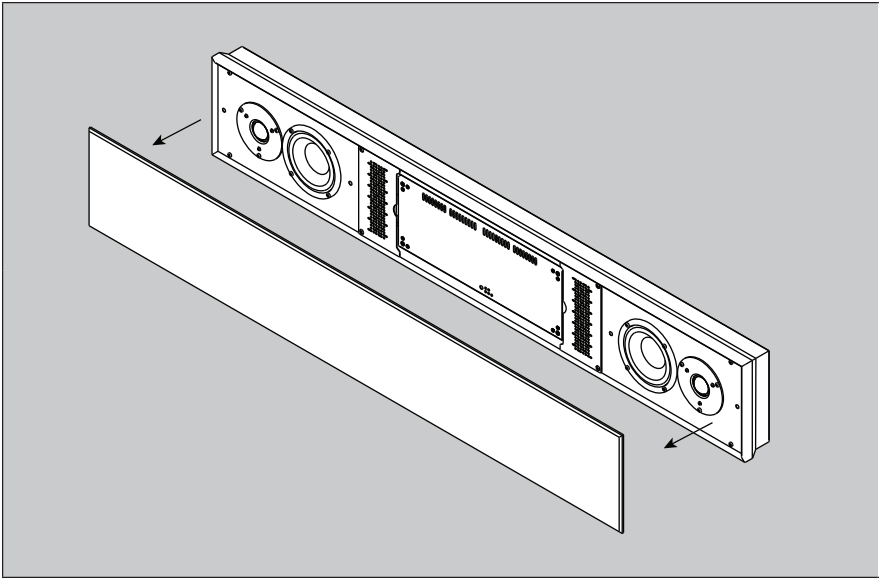


Step 1 Remove Grille

Carefully remove the magnetically attached grille from the front of your speaker and set it aside on a clean, flat surface.

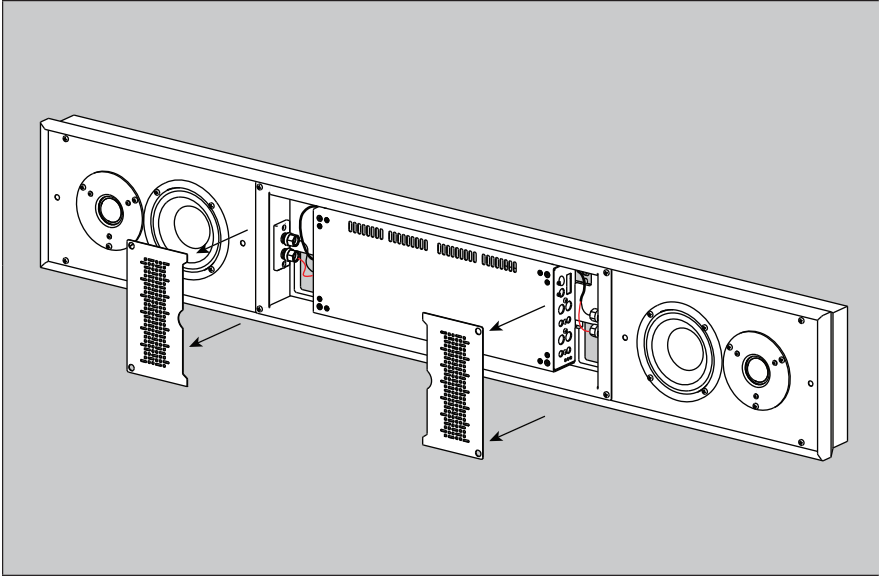


Step 2 Remove I/O Covers

Remove both of the magnetically attached I/O covers from the baffle of your speaker to reveal the left and right panels of your OTO MCA 200 amplifier. Set the I/O covers aside.

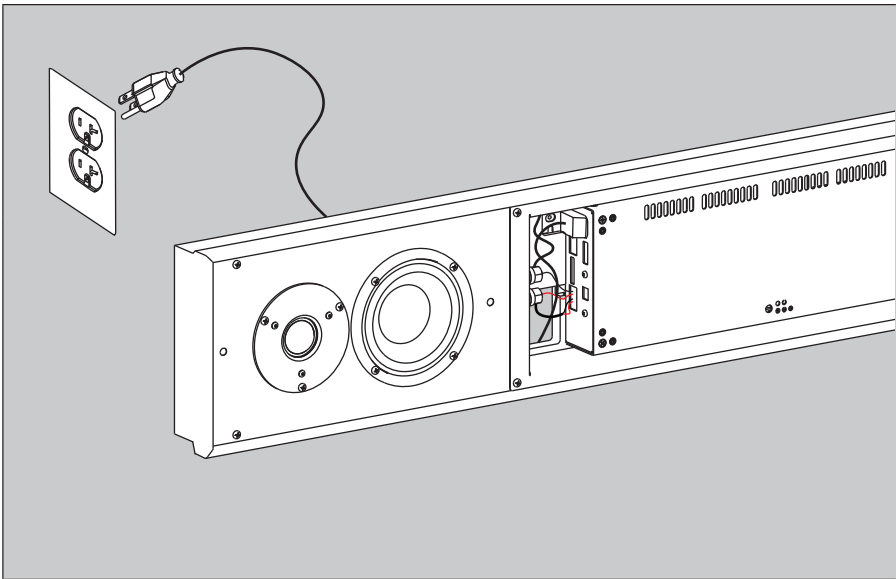


Step 3 Make Connections Part I: Power

Connect your IEC power cable **(A)** to the left panel of your amplifier. Run this cable through the back cutout and to a nearby outlet.

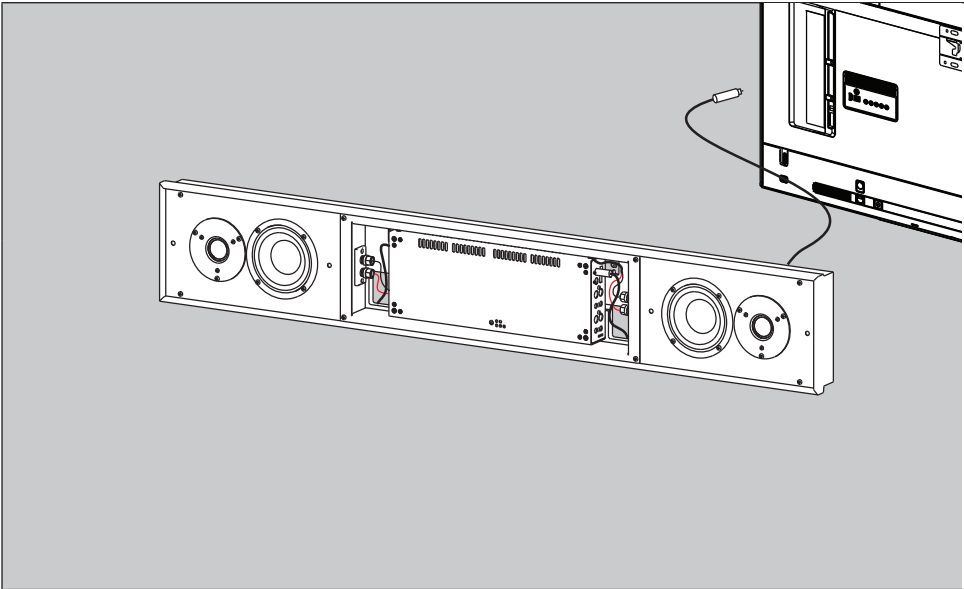


Step 4 Make Connections Part II: Input

If you are using an optical cable **(B)** connect it to your amplifier. Run this cable through the back cutout and to your TV. Otherwise, Refer to page 15 of your OTO MCA 200 manual (included) to wire your powered speaker. If connecting to a powered sub, refer to page 21.

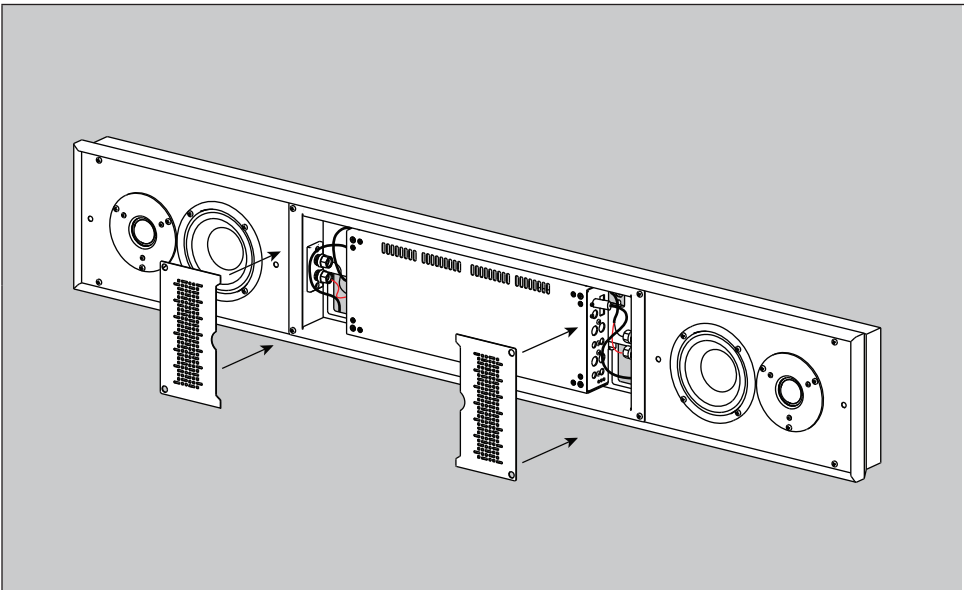


Step 5 Replace I/O Covers

Reattach both of the magnetic I/O covers to the baffle of your speaker to cover the left and right panels of your OTO MCA 200 amplifier.

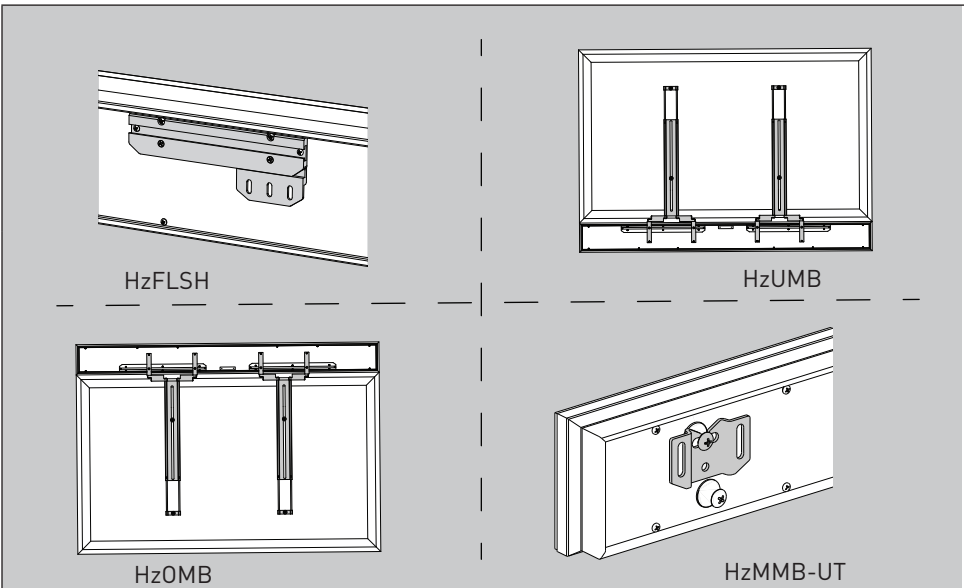

Step 6 Mounting


Mount the soundbar by following the instructions (included) for your selected Leon mounting solution: HzFLSH **(D)**, HzUMB/HzOMB **(E)**, HzMMB-UT **(F)**. If you are installing a Framebar, we recommend mounting 3 to 6" from the bottom of the TV to the top of your soundbar.

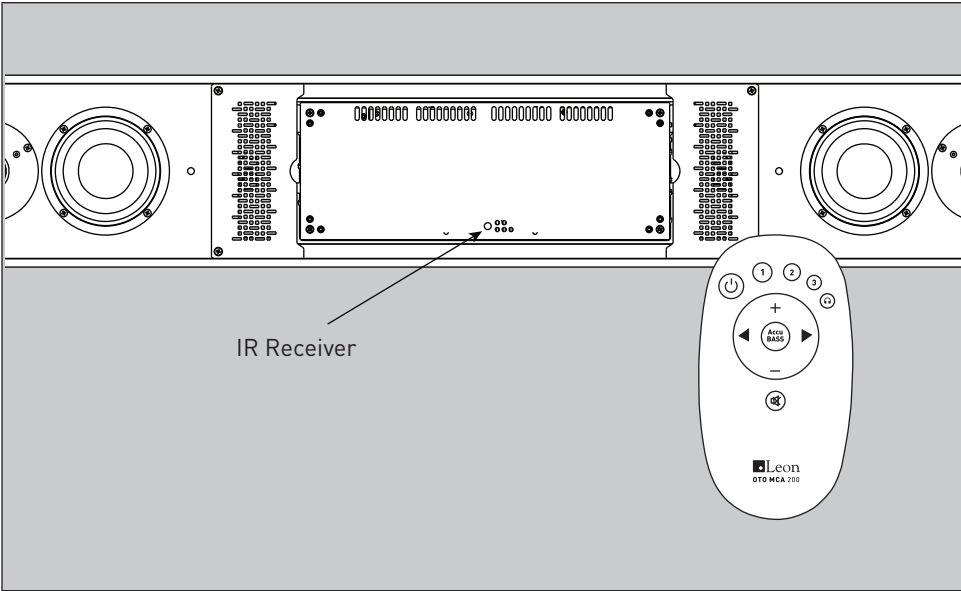

Step 7 IR Learning

The OTO MCA 200 amplifier comes with an IR remote control **C**. To pair your favorite remote control with the OTO MCA 200, refer to page 23 of the OTO MCA 200 manual: IR Learning Procedure.

Once your desired remote control is paired, test the audio.

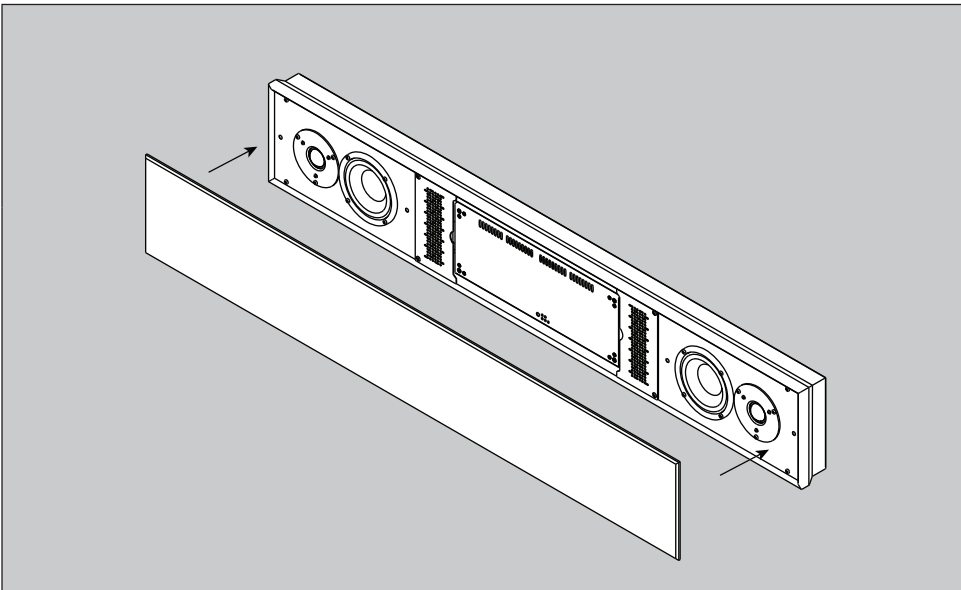

Step 8 Replace Grille

Carefully reattach the magnetic grille to the front of your speaker to complete the installation.

LIMITED TWO (2) YEAR WARRANTY:

Leon Speakers ("Leon") warrants to the first end-user purchaser that this Leon product ("Product"), when purchased from an authorized Leon Dealer, will be free from defective workmanship and materials for the period stated herein. Leon will at its option and expense during the warranty period, either repair the defect or replace the Product with a new or remanufactured Product or a reasonable equivalent.

EXCLUSIONS:

TO THE EXTENT PERMITTED BY LAW, THE WARRANTY SET FORTH ABOVE IS IN LIEU OF, AND EXCLUSIVE OF, ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND IS THE SOLE AND EXCLUSIVE WARRANTY PROVIDED BY LEON. ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY, IMPLIED WARRANTY OF FITNESS FOR USE, AND IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE ARE SPECIFICALLY EXCLUDED. No one is authorized to make or modify any warranties on behalf of Leon.

The warranty stated above is the sole and exclusive remedy and Leon's performance shall constitute full and final satisfaction of all obligations, liabilities and claims with respect to the Product. IN ANY EVENT, LEON SHALL NOT BE LIABLE FOR CONSEQUENTIAL, INCIDENTAL, ECONOMIC, PROPERTY, BODILY INJURY, OR PERSONAL INJURY DAMAGES ARISING FROM THE PRODUCT, ANY BREACH OF THIS WARRANTY OR OTHERWISE. THE RIGHT TO RECOVER DAMAGES WITHIN THE LIMITATIONS SET FORTH IS YOUR EXCLUSIVE ALTERNATIVE REMEDY IF THE LIMITED REMEDY OF REPAIR OR REPLACEMENT FAILS ITS ESSENTIAL PURPOSE.

This warranty statement gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow the exclusion of implied warranties or limitations of remedies, so the above exclusions and limitations may not apply. If your state does not allow disclaimer of implied warranties, the duration of such implied warranties is limited to period of Leon's express warranty.

Warranty Period for this Product:

Two (2) years from the date on the original sales receipt or invoice or other satisfactory proof of purchase.

Additional Limitations and Exclusions from Warranty Coverage:

The warranty described above is non-transferable, applies only to the initial installation of the Product, does not include installation of any repaired or replaced Product, does not include damage to allied or associated equipment which may result for any reason from use with this Product, and does not include labor or parts to repair damage caused by accident, mishandling, disaster, negligence, improper installation, misuse (including, but not necessarily limited to, overdriving the amplifier or speaker, exposing the Product to excessive heat or cold or humidity, direct water spray or immersion), commercial use, abuse, negligence, or normal wear and tear, or from service or repair which has not been authorized by Leon. This warranty also excludes products that have had their housings opened or tampered with, products that are missing or have altered serial numbers, problems caused by using third party accessories, parts or components, and normal cosmetic deterioration caused by environmental conditions.

Obtaining Authorized Service:

To qualify for the warranty, you must contact your authorized Leon Dealer/Installer or call Leon Customer Service at (888) 213-5015 within the warranty period, obtain a return merchandise number (RMA), and deliver the Product to Leon in suitable packaging, shipping prepaid during the warranty period, together with the original sales receipt, invoice or other satisfactory proof of purchase.

Questions?

For additional support, call customer service
1 (888) 213-5015 | Mon - Fri 8 am-6 pm EST



Leon is a registered trademark of Leon Speakers, Inc ©2023

REF-25-007_HzOTO_20230330