

Ente SoundTile




Installation Instructions

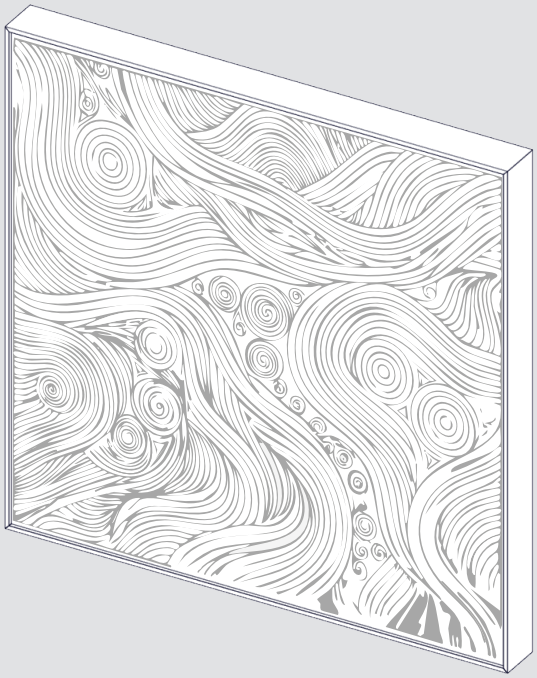


Leon®

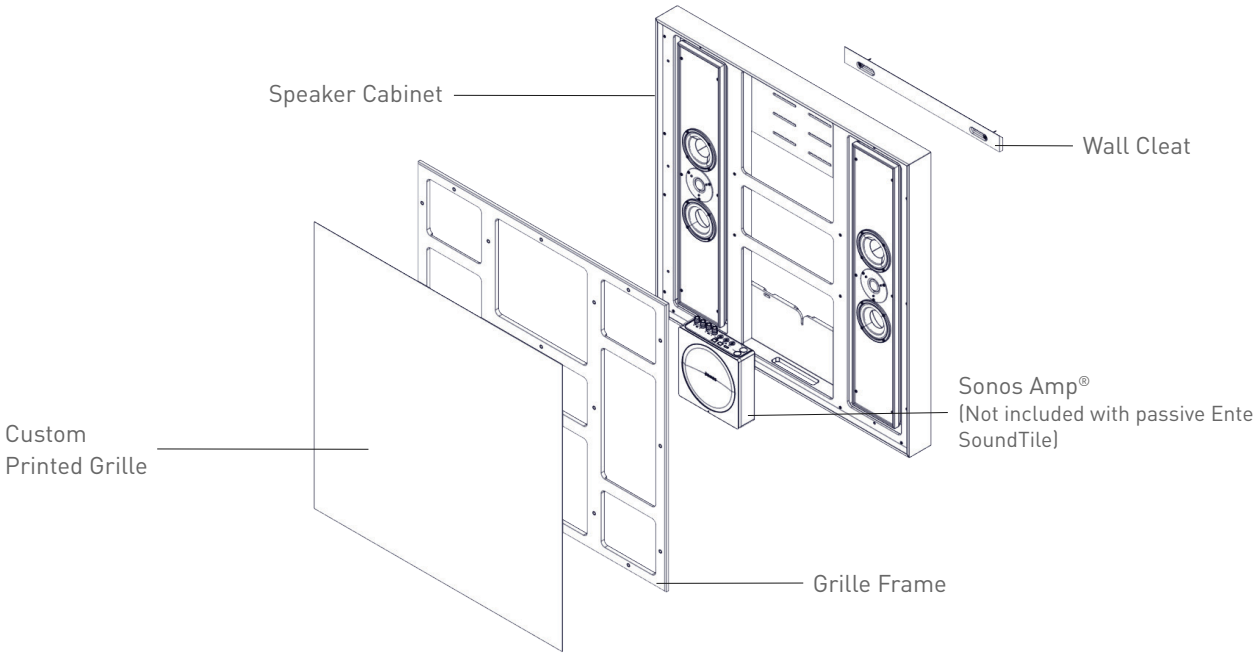

What's Included

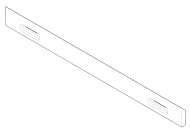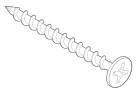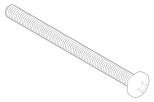 **A x1** Wall Cleat	 **B x2** Wood Screws	 **C x1** M5 x 12mm Truss Head Screw	**D x2** FlipToggle® Bolts	 **E x2** 10-32 Phillips Head Screws
 **F x4** Zip Ties				


Tools Required

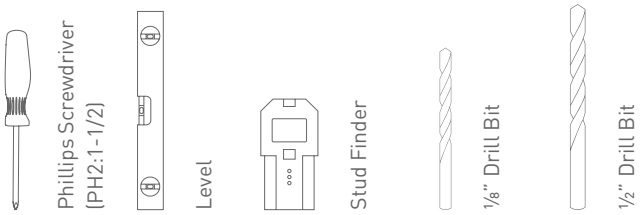

Before Installation


⚠ **The edges of the Ente SoundTile can be sharp. Handle with care.**

- Please install and/or uninstall the Ente SoundTile with 2 or more people
- Do not apply force to the metal grille
- Choose an installation location free of physical obstructions behind or within the wall
- Estimated assembly time is 20-45 minutes

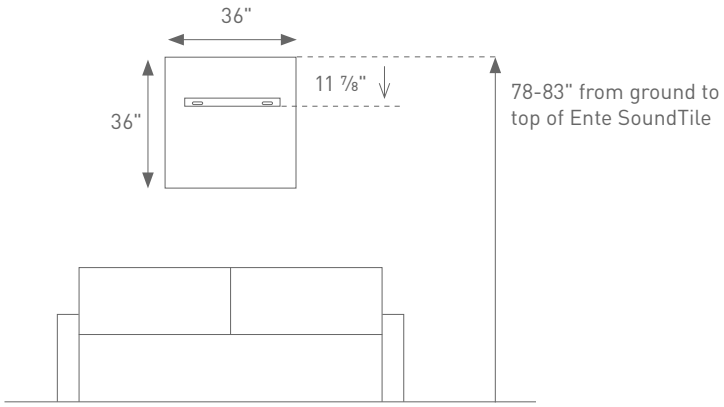


Step 1.
Mark Installation Location

Leon's preferred mounting location for the top of the Ente SoundTile is 78-83" from the floor, which centers the artwork at 60-65", or approximately at eye level. Mark the wall 11 7/8 " down from the desired location for the top of the Ente SoundTile. This indicates where the bottom edge of the Wall Cleat **(A)** will be installed on the wall.

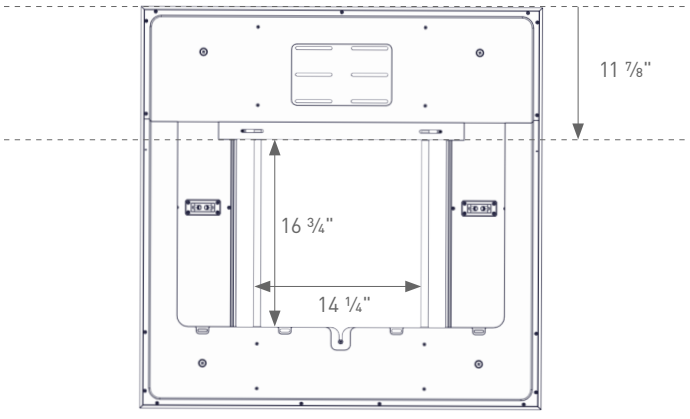

Step 2.
Prepare Installation Location - Cable Routing


The entire footprint of the Ente SoundTile is 36" x 36". Prior to installation, note the opening in the back of the Speaker Cabinet, which is 14 1/4" (w) x 16 3/4 (h)" tall. This opening can be used for routing cables into the wall, or to install an electrical outlet to conveniently supply power for the Sonos Amp. Complete the installation of all in-wall infrastructure before mounting the Ente SoundTile.

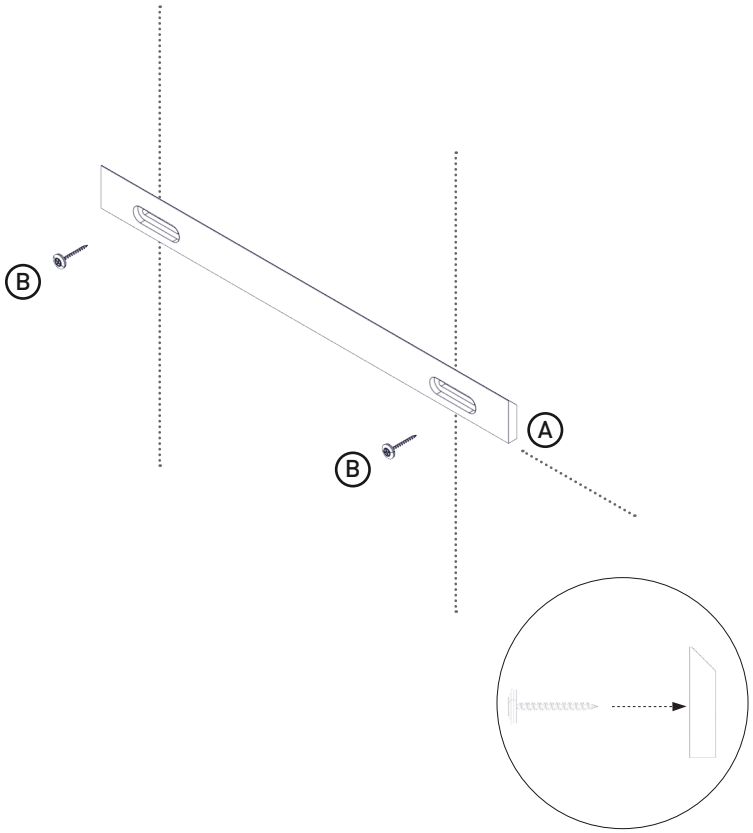

Step 3.
Install Wall Cleat


The Wall Cleat **(A)** must intersect two studs, and can be installed up to 3 ½" off-center if necessary. Align the bottom of the wall cleat to the marked location defined in Step 1, ensuring that the wall cleat is level. At each location where the wall cleat intersects a stud, drill two ⅛"" pilot holes through the cleat and drywall and into the stud. Use the two Wood Screws **(B)** to attach the wall cleat to the wall. Ensure the screw heads are flush with the surface of the wall cleat.

NOTE: If the desired location of the Ente SoundTile does not align with the studs, you can also use the provided FlipToggle® anchors found in the kit. Drill a pilot hole of ½" and insert the FlipToggle following the online installation guide found at https://www.cobraanchors.com/en/fliptoggle.html

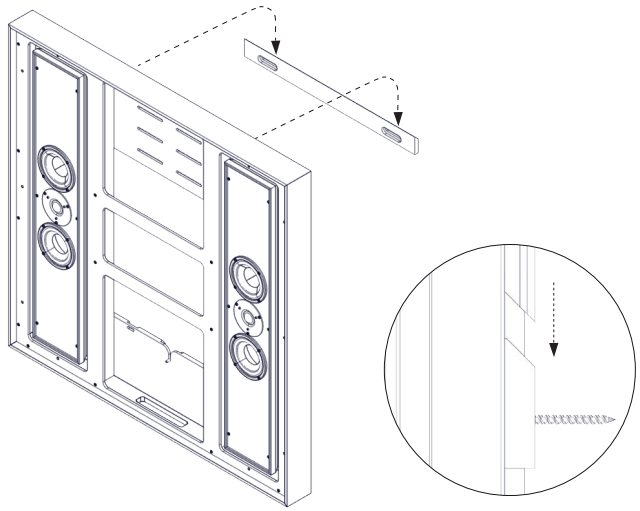

Step 4.
Hang Speaker Cabinet on Wall Cleat


Lift the Speaker Cabinet and gently lower it onto the wall cleat so that the angled cleats interlock. Ensure the back of the cabinet and wall cleat are meshed completely as shown. The position of the cabinet can be adjusted left and right if needed (as much as 3 ½" from center).

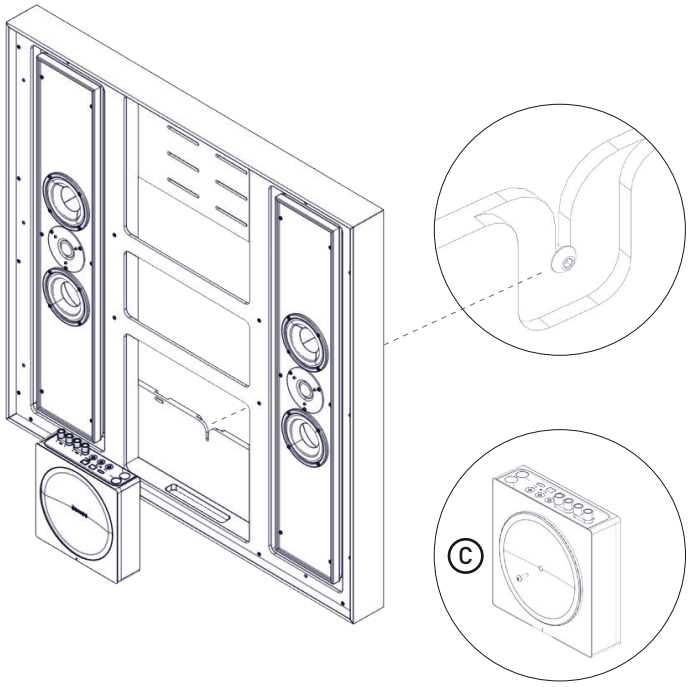

Step 5.
Install Sonos Amp and Connect Wiring

If installing the Sonos Amp, install the M5 Truss Head Screw **(C)** into the back of the amp at the location shown, finger-tightening it. Slide the screw head into the keyhole in the back of the Speaker Cabinet. Now, make all power, network, and speaker connections. Additional equipment can be installed inside the cabinet if needed, either in the center of the cabinet or above/ below each speaker.


NOTE: Do not over-tighten

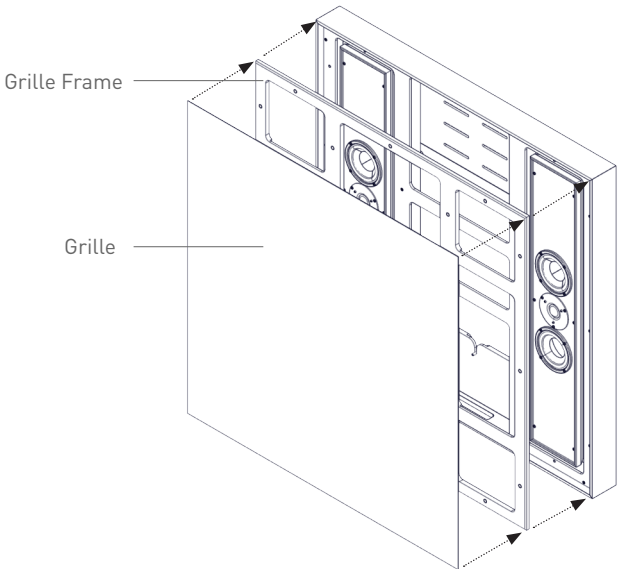

Step 6.
Attach Grille and Grille Frame

Magnetically attach the Grille Frame to the Speaker Cabinet. Then magnetically attach the Grille gently to the Grille Frame. This completes the installation of the Ente SoundTile.

NOTE: Take care with the metal grille so as not to bend

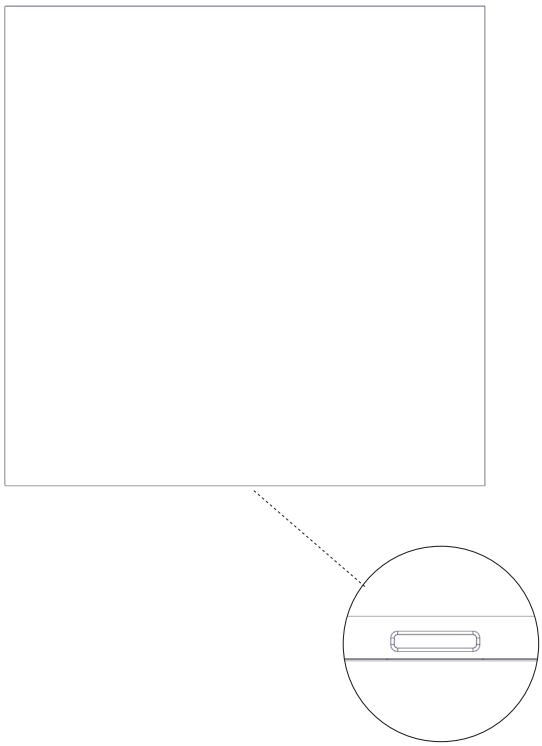

How to Remove Grille and Access Controls

The Grille Frame and Grille can be removed via the slot on the bottom of the Speaker Cabinet by gently pressing from the inside. This also allows access to the front panel controls of the Sonos Amp.



Scan the QR Code for Warranty

Questions?

For additional support, call customer service
1 (888) 213-5015 | Mon - Fri 9:00 am-6:00 pm EST

Leon

Leon is a registered trademark of Leon Speakers, Inc ©2025.

REF-25-072_Ente_SoundTile_20250514